


JUNIOR CORDER

ALL TRANSISTOR TAPE RECORDER

MODEL - R. S. R - 321



- ① Microphone Jack.
- ② Earphone Jack.
- ③ Operating Knob
- ④ Volume Control Switch.
- ⑤ Tape Supply Reel.
- ⑥ Take-up Reel.
- ⑦ Head Cover.
- ⑧ Tape.
- ⑨ Take-up Reel Spindle.
- ⑩ Case.

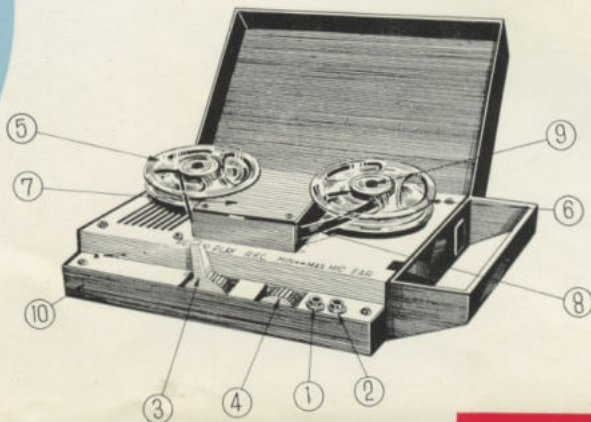

Battery

Amp 9V : 006P $\times$ 1

Motor 1.5V : UM-2 $\times$ 2

This Tape Recorder Model 3 is built to operate with simplicity and maximum efficiency. Except for the volume control, there is only one other control. This eliminates the chances of making mistakes and the user can operate this machine by simply moving this Operational Knob to whatever position desired.

OPERATING INSTRUCTIONS


Readying the machine for use:

1. After removing the outside packing, see that the Knob is at the "STOP" position, then turn the machine upside down and remove the lid of the Battery Compartment. Take out the microphone, re-insert the UM-2 (1½ Volt) Batteries into their Compartment making sure that the plus and minus terminals are not reversed. Attach the terminals to the 006-P (9 Volt) Battery and also put it back into its slot. Put back the cover on to the compartment and turn the machine right side up.
2. Open the cover, remove the wrapping from the tape and the empty reel and replace them on the holders, with the reel of tape on the left and the empty reel on the right. Make sure that the glossy side of the tape faces front. Release a small amount of tape, insert it between the white felt pad and the magnetic recording head and thread it into the empty reel on the left. Plug in the microphone and the machine is now ready for use.

To Record:

1. Turn the Operating Knob to the "REC" position, and the tape will commence moving from the full reel to the empty reel.
2. Hold the microphone about 8" from the mouth and speak in a normal tone. Do not speak too loudly.
3. When recording is finished, return Operating Knob to the "STOP" position.
4. For best recording, the Volume Control Switch should be set at the medium level.
5. Recordings can be monitored by inserting the earplug.
6. After one side of your tape has been completely used, lift out the two reels and reverse their position, so that the glossy side of the tape again faces you.

One Switch method

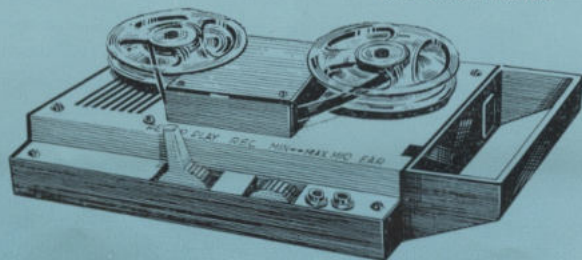

D. C. biasing method, dual track



To Play Back:

- 1. Turn the Operational Knob to the "REW" position and the tape will rewind on to the left hand reel. At the desired position, turn the knob to "PLAY" and whatever has been recorded will be played back.


(Note: If the earplug has been used during recording, detach it as otherwise, the playback will only come through the earphone.)
- 2. To stop playing, simply return the Knob to the "STOP" position.

To Erase:

1. As this machine automatically erases previous recordings, when a new recording is made, the same reel of tape can be used as many times as required.
2. To erase previous recordings without making a fresh recording simply remove the microphone and run the tape from left to right with the Knob set at the "REC" position.

REMOVE ALL BATTERIES
FROM THE MACHINE
WHILE NOT IN USE
TO ENSURE LONGER LIFE.



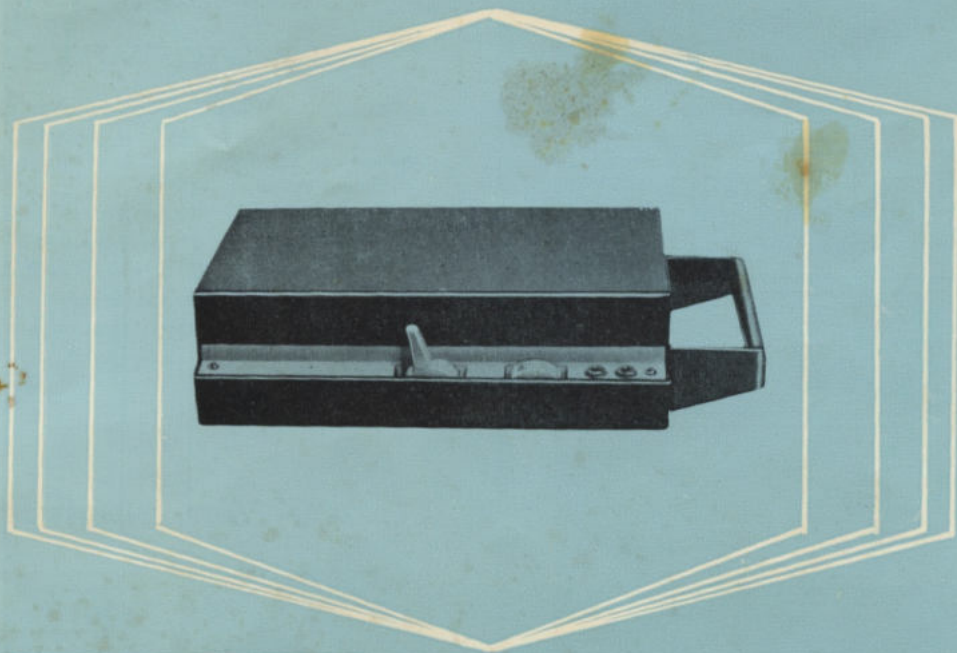

PRINTED IN JAPAN